








1. 安装与连接

快速安装指南

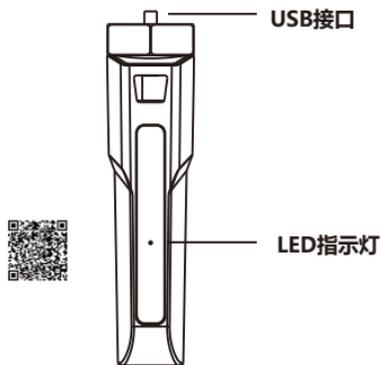

LED指示灯状态说明		
绿色	慢闪	模块正常工作
	快闪	固件升级中
	长亮	模块正常启动, 未连接服务器
	灭	模块供电异常或程序启动异常
蓝色	慢闪	/
	快闪	蓝牙通讯中

慢闪 (1s亮, 1s灭); 快闪 (200ms亮, 200ms灭)

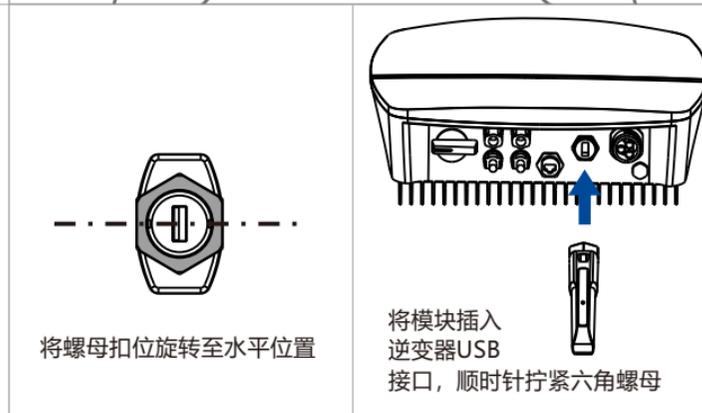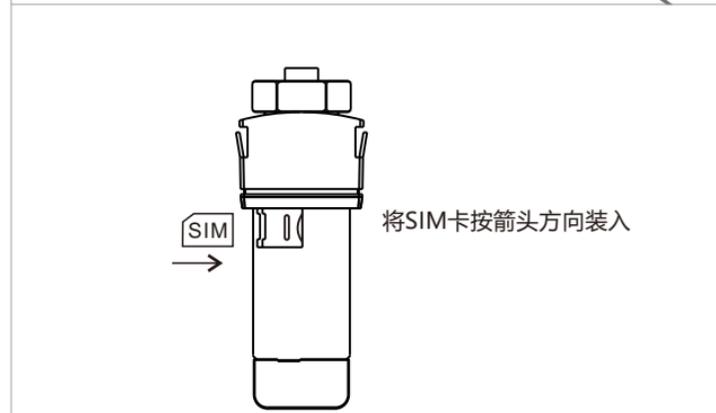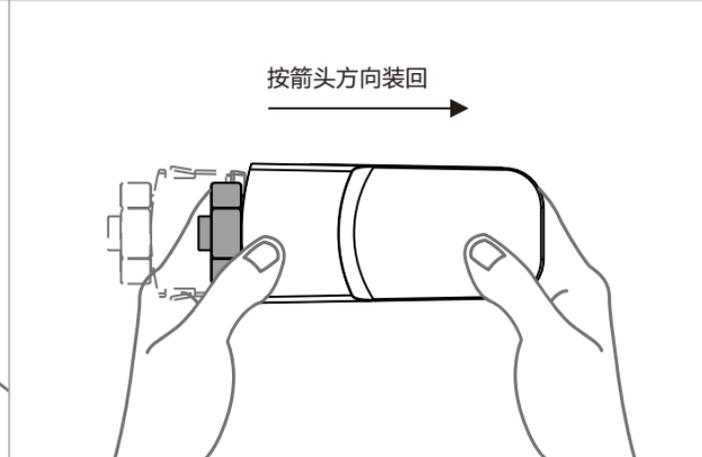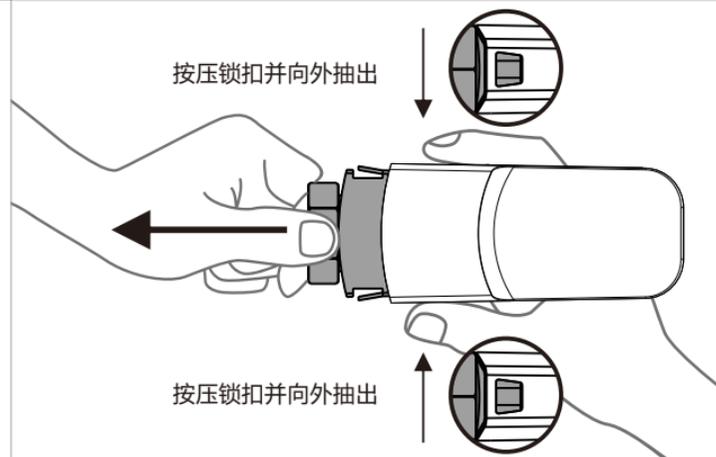


2. 安装商配置

2.1 验证模块安装

安装通讯模块后, 逆变器上电, 等待 2 分钟。如果模块信号灯为绿色(如封面表中所述), 则表示模块正常工作。

2.2 安装和登录应用程序

- ① 在应用商店中搜索“elekeeper”。
- ② 下载并安装该应用程序。
- ③ 打开应用程序, 并点击右上角的三个点图标...。根据您的安装地点, 选择语言和节点。
- ④ 使用您的账户和密码登录。如果您没有账户, 请注册一个新账户并登录。

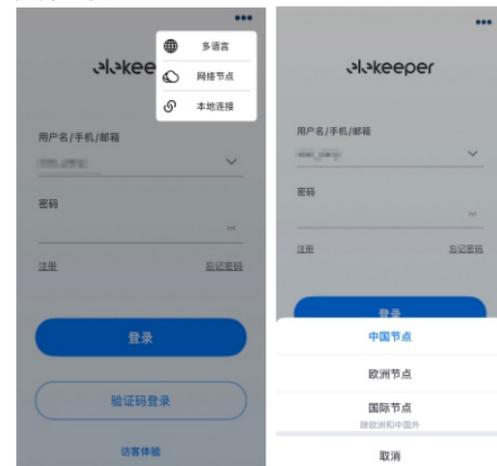


2.3 配置模块

- ① 在您的手机上启用蓝牙功能。
- ② 在应用程序的**首页**或**服务**页面上, 选择**远程配置**。点击**蓝牙**, 然后点击**下一步**。
- ③ 选择模块对应的 BlueLink, 例如, BlueLink:00196。




- ④ 在**设备列表**页面上, 点击模块以查看模块的详细信息。
- ⑤ 在模块详细信息页面上, 点击右上角的设置图标以更改模块配置。

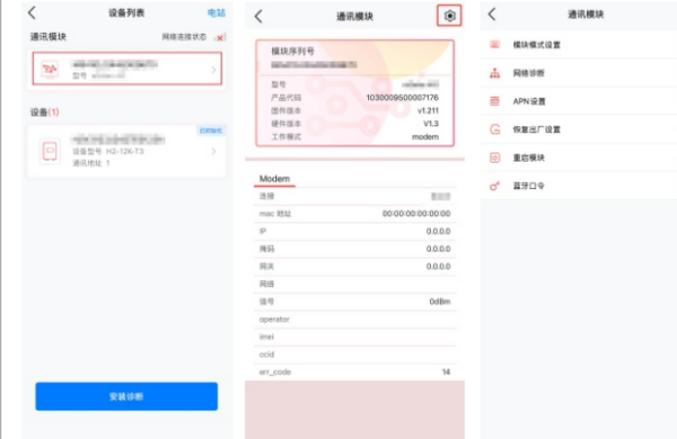







Quick Installation Guide

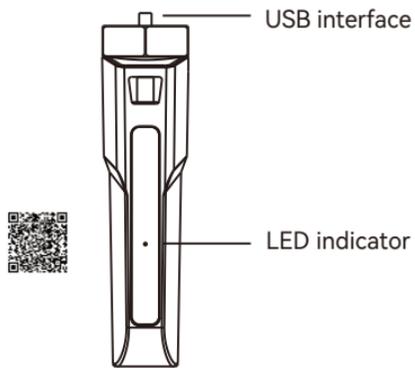

LED indicator status description		
Green	Slow blink	The module is working properly.
	Fast blink	The firmware is upgrading.
	Solid	The module is not connected to server.
	Off	No power supply or a program fault occurs.
Blue	Slow blink	/
	Fast blink	The Bluetooth is connected.

Slow blink(1s on, 1s off); Fast blink(200ms on, 200ms off)

1. Installation and Connection

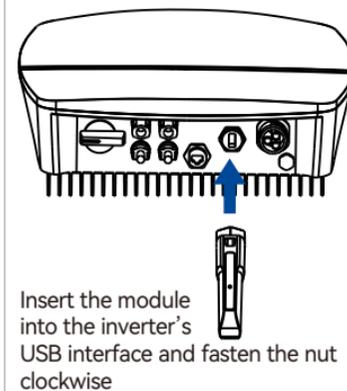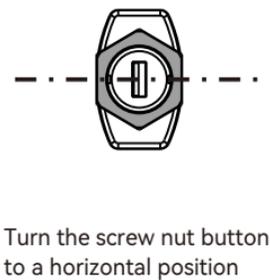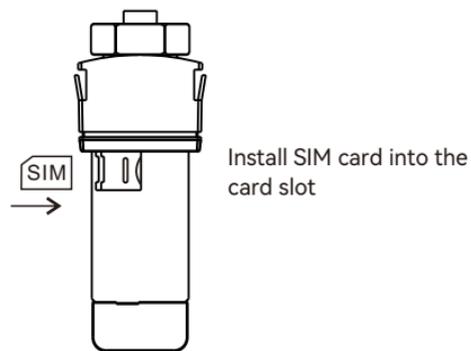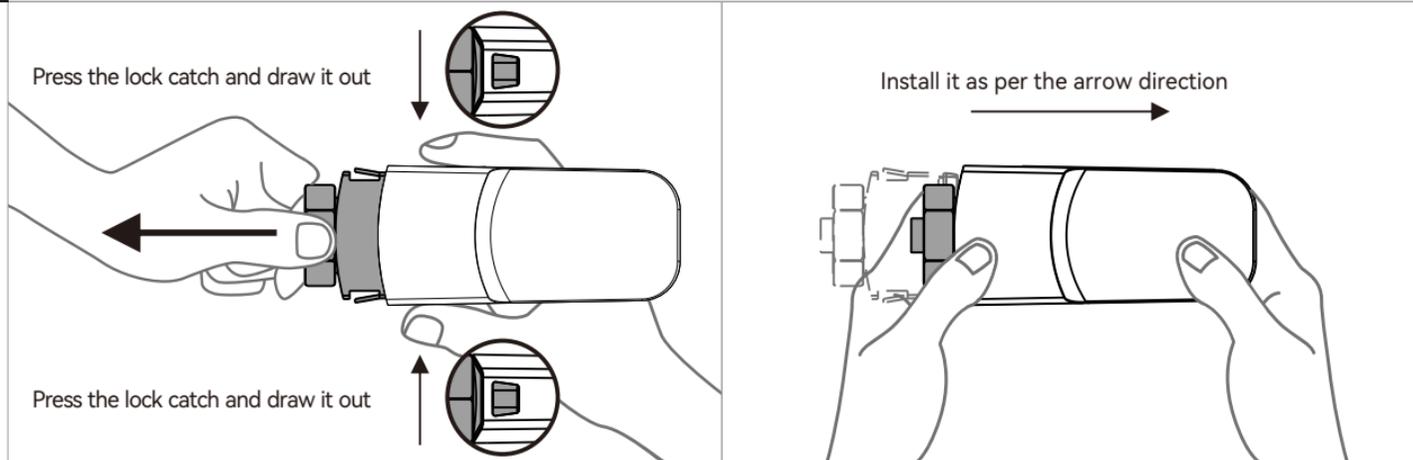


2. Commissioning

2.1 Verify module installation

After installing the module, power on the inverter and wait for two minutes. If the module signal light is green as described on the cover page, it means that the module is working properly.


2.2 Install and log in to the app

- On your mobile phone, search for "elekeeper" in the app store.
- Download and install the App.
- Open the app and tap the three-dot icon **⋮** at the top right corner.
- Select the language and network node based on your Log in with your account and password. If you do not have an account, register a new account and log in.

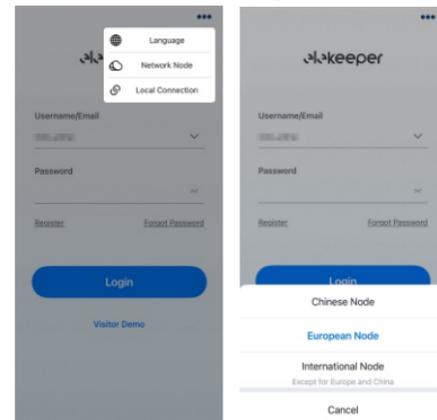

2.3 Configure the module

- Enable the Bluetooth function on your mobile phone.
- On the **Home** or **Service** page of the app, select **Remote Configuration**. Tap Bluetooth and then **Next Step**.
- Select the BlueLink of the module, for example, BlueLink:00012.

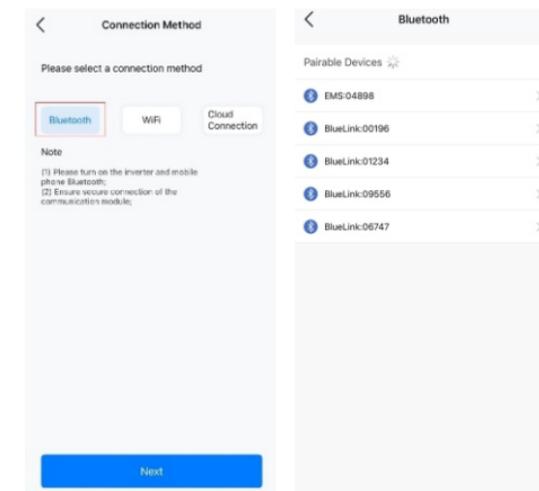

- On the **Device List** page, tap the module to view the details of the module

- On the details page of the module, tap the settings icon at the upper right corner to change the configurations of the module.

